

**Thank you for choosing a NIVELCO instrument.
We are sure that you will be satisfied throughout its use!**

1. APPLICATION

The NIVOFLIP bypass level indicators are suitable for level indication of pressurized vessels. Operation of NIVOFLIP is based on the communicating vessels principle. The welded bypass chamber that is the body of the indicator and the tank form one pressurized system. Mounted on suitable connection flanges located on the side of the tank the liquid level in the bypass tube and the tank is equal. A float in the bypass tube incorporating a polarized magnet tracks the level of the liquid and flips the bi-coloured magnetic flaps as the float passes.

2. TECHNICAL DATA

2.1 GENERAL DATA

Type	Standard MLQ-1□□-□, MLQ-3□□-□, MLQ-4□□-□	High temperature MHO-□□□-□
Optical display	Bi-coloured magnetic flaps	
Display	Scale	cm / inch
	Accuracy	±10 mm (±0.4 inch)
	Resolution	5 mm (0.2 inch)
	Error indication	lower 100 mm (4 inch), inverse polarized flaps
Tube diameter	Ø60.3 mm (Ø2.35 inch)	
Flange distance	500 – 5500 mm (as per order codes)	
Process connection	DIN, ANSI flanges (as per order codes)	
Aerating connection	M20x1.5	
Drain connection	DN50 / M20x1.5	
Process pressure	See 2.5 table	
Test pressure	1.5x Process pressure	
Material of wetted parts	housing: 1.4571 stainless steel, float: 1.4301 stainless steel or TiGr2 titan	
Ambient temperature	-60 °C ... +60 °C (-76 °F ... +140 °F)	
Medium temperature	-60 °C ... +130 °C (-76 °F ... +266 °F) -60 °C ... +250 °C (-76 °F ... +482 °F)	
Medium density ⁽¹⁾	with stainless steel float (M□□-□□□-0): 40 bar: 0.8 kg/dm ³ ; 63 bar: 0.83 kg/dm ³ with titan float (M□□-□□□-1): 40 bar: 0.55 kg/dm ³ ; 63 / 100 bar: 0.7 kg/dm ³	
PED (2014/68/EU) approval	Category III., Module B + C2	
Level switch	optional, externally mounted, freely adjustable MAK-100 level switch	
Level transmitter	optional, externally mounted, NIVOTRACK M□L-500 magnetostrictive level transmitter ⁽²⁾	

⁽¹⁾ In case of using MAK-100 level switch the minimal medium density should be 0.1 kg/dm³ (more than the above specified)

⁽²⁾ In case of using NIVOTRACK level transmitter the maximum process temperature is 170 °C

2.2 ACCESSORIES

- User's manual,
- Warranty Card,
- Declaration of Conformity,
- Material Document of all applied parts,
- Product Assessment Report.

2.3 ORDER CODES

NIVOFLIP M □ □ - □ □ - □ □

TYPE	CODE	CONNECTION FLANGE	CODE	NOMINAL PRESSURE	CODE	CODE	FLANGE DISTANCE *	CODE	FLOAT	CODE	
Normal	L	SIZE	B C D RF TH	PN40 Class 400	1	0	0 m 0 dm	0	Stainless steel (1.4301) in case of PN40, PN63	0	
High temperature	H	DN15	A L S	PN63 Class 600	3	1	1 m 1 dm	1	Titan (TiGr2) in case of PN40, PN100	1	
		DN20	B M T	PN100 Class 900	4	2	2 m 2 dm	2	In case of (1.4301) PN40, PN63 with inch scale	2	
		DN25	C N U	PN16 Class 150	5	3	3 m 3 dm	3	In case of (TiGr2) PN40, PN100 with inch scale	3	
		DN40	D P V			4	4 m 4 dm	4			
		DN50	E R W			5	5 m 5 dm	5			
		ANSI 1/2"			F			6 dm	6		
		ANSI 3/4"			G			7 dm	7		
		ANSI 1"			H			8 dm	8		
		ANSI 1 1/2"			J			9 dm	9		
		ANSI 2"			K						
		3/4" BSPT**			X						
		3/4" NPT**			Y						
		1" BSPT**			1						
		1" NPT**			2						

* Max. 5.5 m
** Max. 40 bar
*** Without float and flip

Bypass chamber version *** Bypass connection		CODE
3/4" BSP		A
3/4" NPT		B
1" BSP		C
1" NPT		D
1 1/2" BSP		E
1 1/2" NPT		F
2" BSP		G
2" NPT		H

2.4 MECHANICAL CONSTRUCTION

Main dimensions of the instrument are shown on the 2nd drawing. Main parts of the instrument are shown on the 1st drawing:

- Welded bypass chamber (the medium to be measured/displayed is moving inside the tube)
- Float incorporating a polarized magnet (follows the level of moving medium, operates the bi-coloured flaps, or the sensor of a magnetostrictive transmitter via magnetic coupling)
- Bi-coloured magnetic flaps display (visually indicates the level change by changing the colour of the flaps)
- Drain connection (proper closing at the bottom of the welded pressure equipped tube)
- Aerating connection (closing the bypass tube at the top and allow unwanted air to escape from the unit)
- Drain screw (allows emptying of the measured medium from the tube/tank, closing of the pressure equipped device)

NIVOFLIP

BYPASS LIQUID LEVEL INDICATOR

USER'S MANUAL



Manufacturer:

NIVELCO Process Control Co.


H-1043 Budapest, Dugonics u. 11.

Phone: (36-1) 889-0100 ■ Fax: (36-1) 889-0200


E-mail: sales@nivelco.com ■ www.nivelco.com



1417

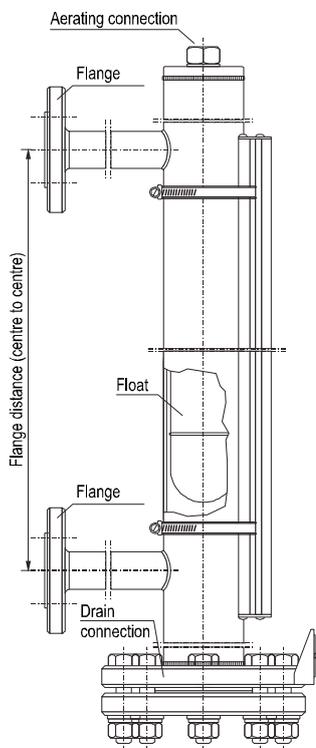

1. ábra: a készülék fő egységei

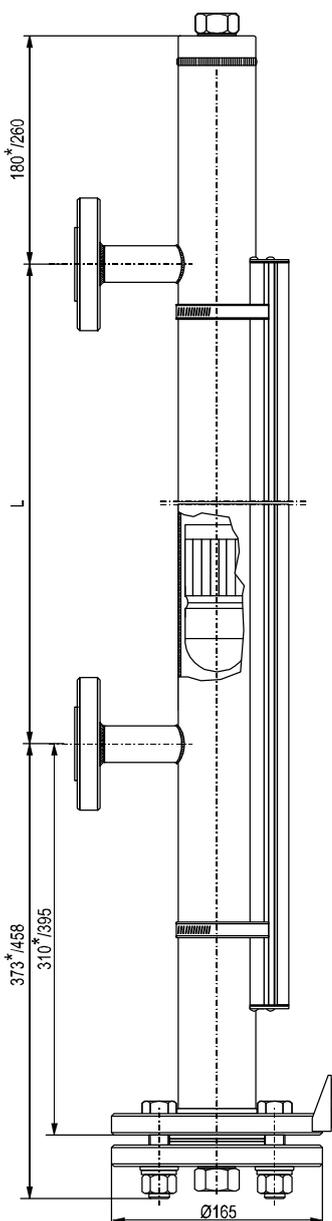


* in case of 40 bar stainless steel float
2nd drawing: main dimensions of the instrument

2.5 MAXIMAL PROCESS PRESSURE

Maximal process pressure	Process connection		MSZ EN 1092 flanges	ASME B16.5 flanges and process connections
	Normal	ML□-1□□-□	ML□-3□□-□	40 bar
ML□-4□□-□			63 bar	930 psi
ML□-5□□-□			100 bar	1440 psi
MH□-1□□-□		MH□-3□□-□	16 bar	232 psi
		MH□-4□□-□	35 bar	500 psi
High temperature	MH□-3□□-□	55 bar	800 psi	
	MH□-4□□-□	88 bar	1275 psi	
		MH□-5□□-□	14,1 bar	204 psi

When high temperature version is used in a lower temperature range, the maximal process pressure can be increased in accordance to the following diagram:

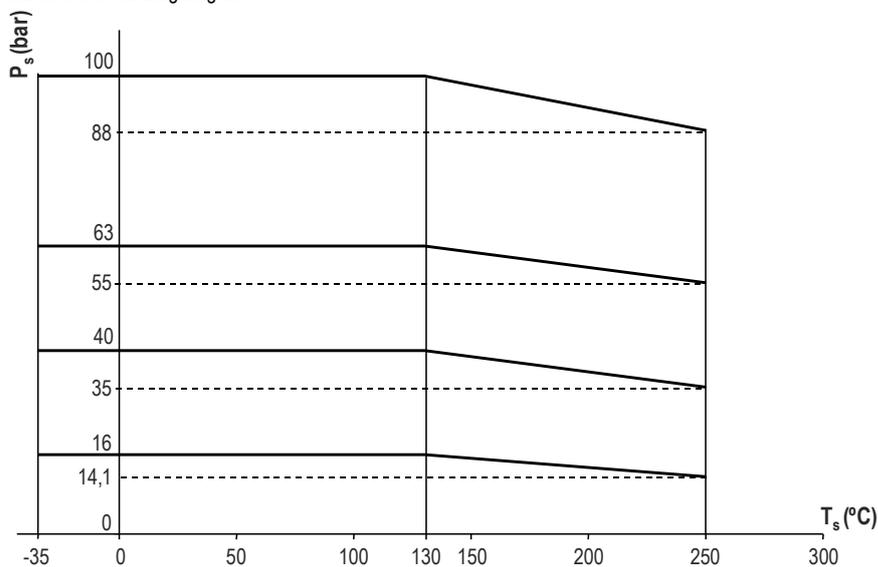

3. MOUNTING

Before the installation of the unit make sure that the process connection has proper dimension and the size and the position of the screws are suitable for the proper mounting.

The unit is to be mounted on suitable connection flanges located on the side of the pressurized vessel, the distance between the flanges centre to centre is the nominal range of the unit. The two flanges are at the low and high levels needed to be indicated or measured. Sealing of the welded chamber and the closing flanges have to be pressure resistant and the material of the sealing has to be chemically resistant to the measured medium. Always use the delivered sealings, if the application does not require any other special sealings. Using two layers to increase the thickness of the sealing is not permitted. Avoid the over-tightening of the sealing. Usage of re-installed sealing is not permitted. Unit with damaged sealing surface cannot be sealed properly.

The plastic protecting plug and the locking element should be removed from the process connection to provide free movement of the float and the medium. In case of further transportation of the unit fixing of the float is required under the bottom process connection in accordance to protect the float against mechanical impacts.

4. PUTTING INTO OPERATION

Before putting the system under process pressure, proper sealing of the connection flanges should be checked. Units are adjusted at the manufacturer to material with 1.0 kg/dm³ medium density. When the measured medium has different density, then magnetic flaps display can be adjusted by loosening the fixing clamps. The stickered scale helps to find the right position. After finding the right position, fixing clamps should be fastened.

5. MAINTENANCE, REPAIR

The unit does not require routine maintenance, however the tube may need occasional cleaning to remove surface deposits. Cleaning can be performed through the drain connection. Repairs will be performed at Manufacturer's premises. Units returned for repair should be cleaned or disinfected by the customer.

mld1050a0600h_09
November 2019.

NIVELCO reserves the right to change technical data without notice!